

09710156-149900

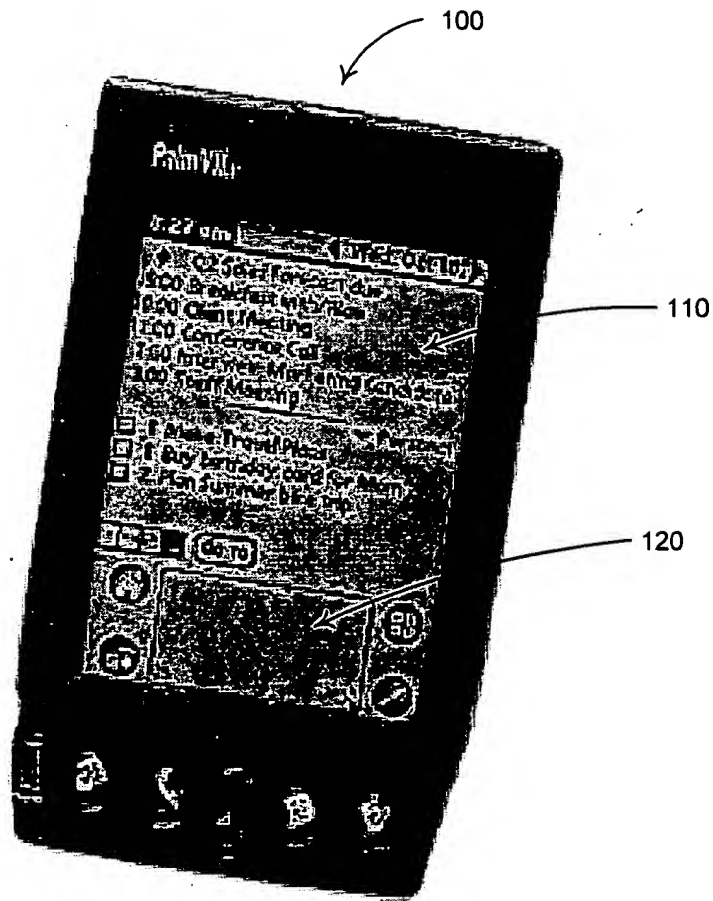


Fig. 1

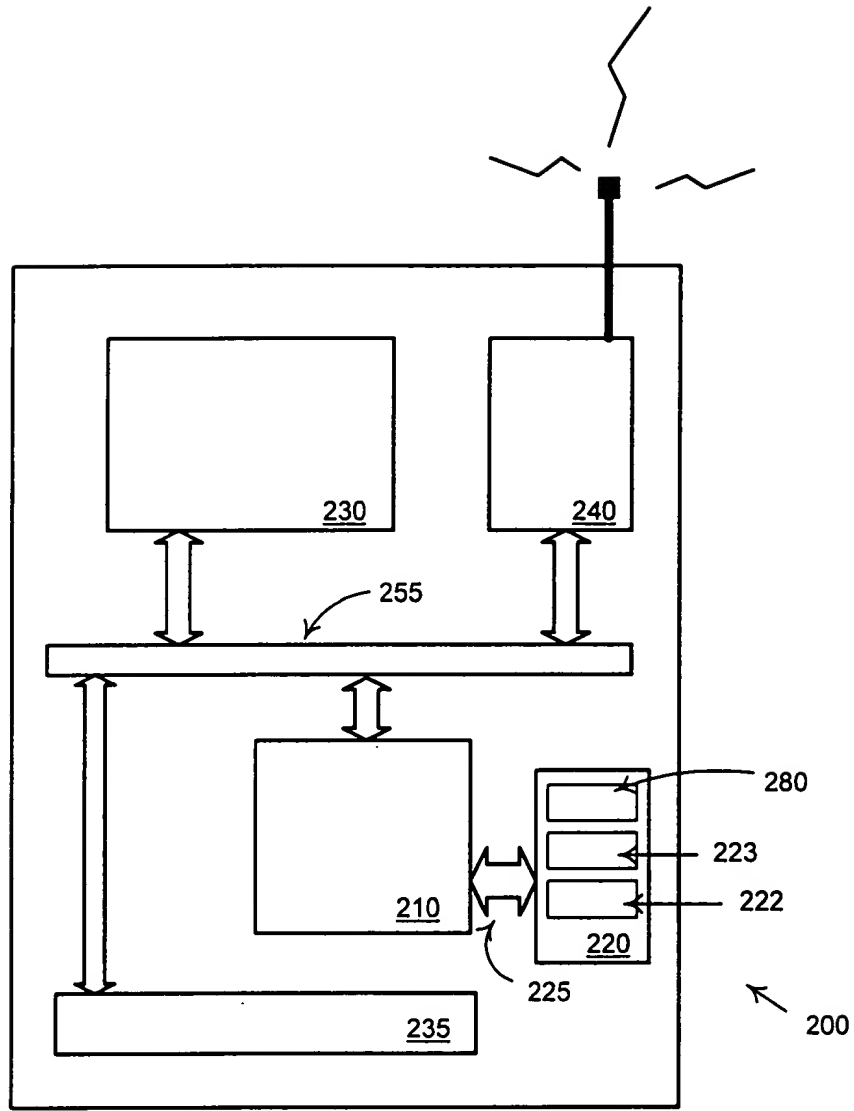


Fig. 2

Figure 1 is a schematic diagram of a handheld electronic device 300. The device has a display screen 302. On the screen, there is a 'Preferences' menu 320. Within this menu, there is a 'Wireless' option 330. Below the 'Preferences' menu, there is a 'Notification:' section 340. This section contains three toggle buttons: 'ON' 355, 'OFF' 360, and 'Schedule' 365. Below the 'Notification:' section, there is a 'Help' button 380. The device also features a speaker grille 301 at the bottom left, a central button 305, and four circular buttons 306 on the right side. The entire device is labeled 300.

FIG. 3

09710156.10900

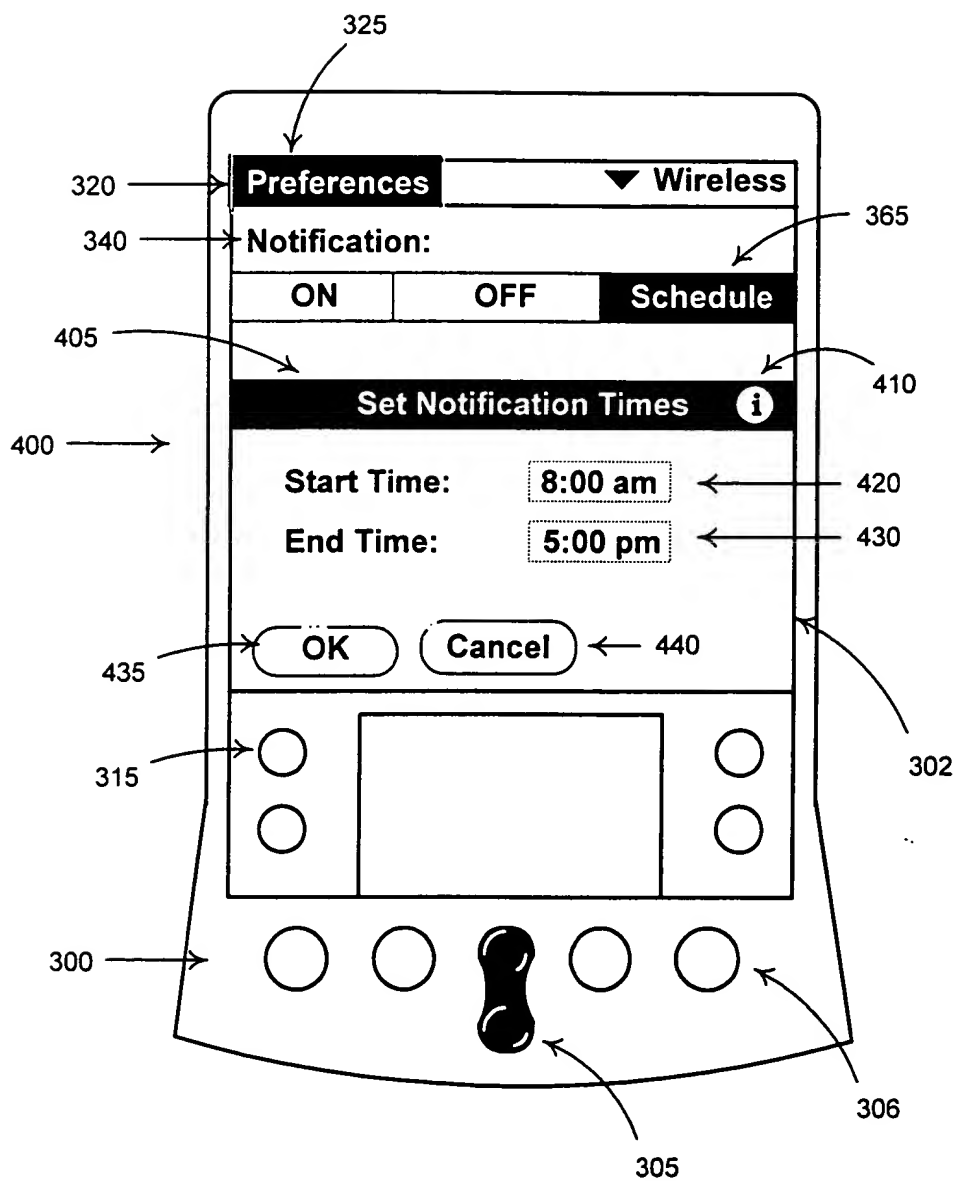


FIG. 4



Fig. 5A

09740156-110900

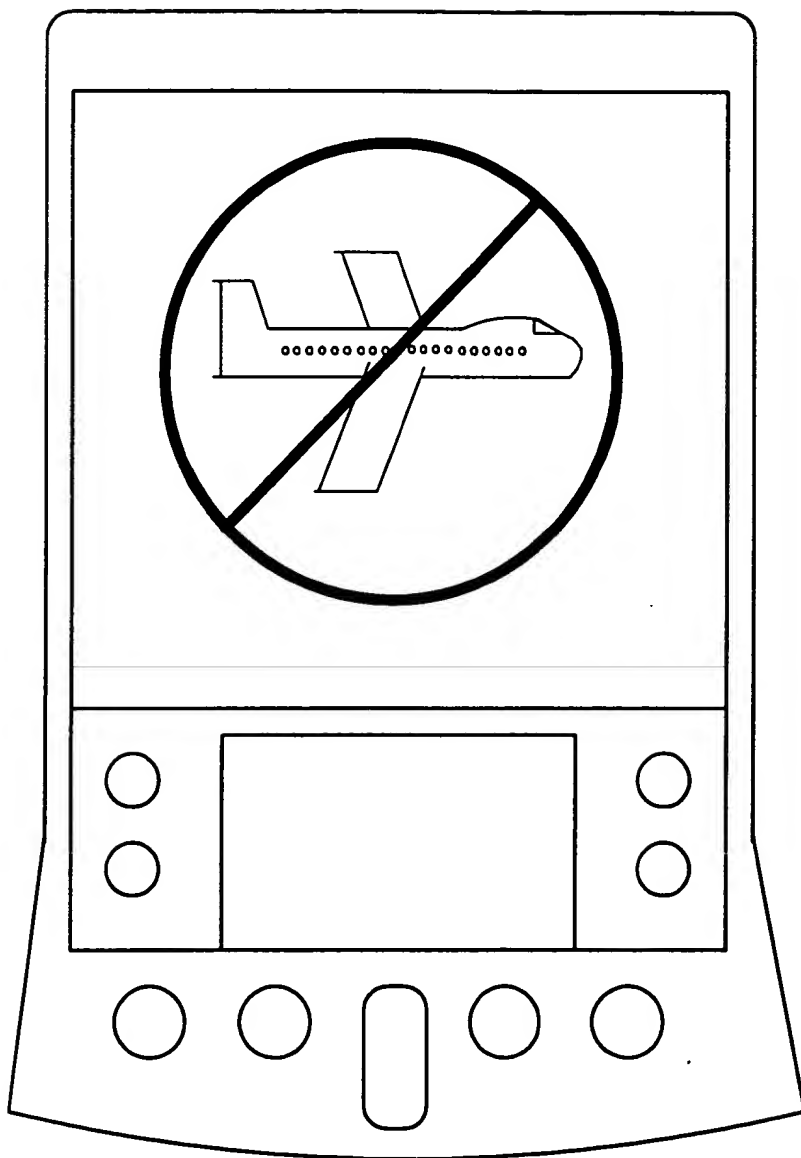


Fig. 5B

09710156-110900

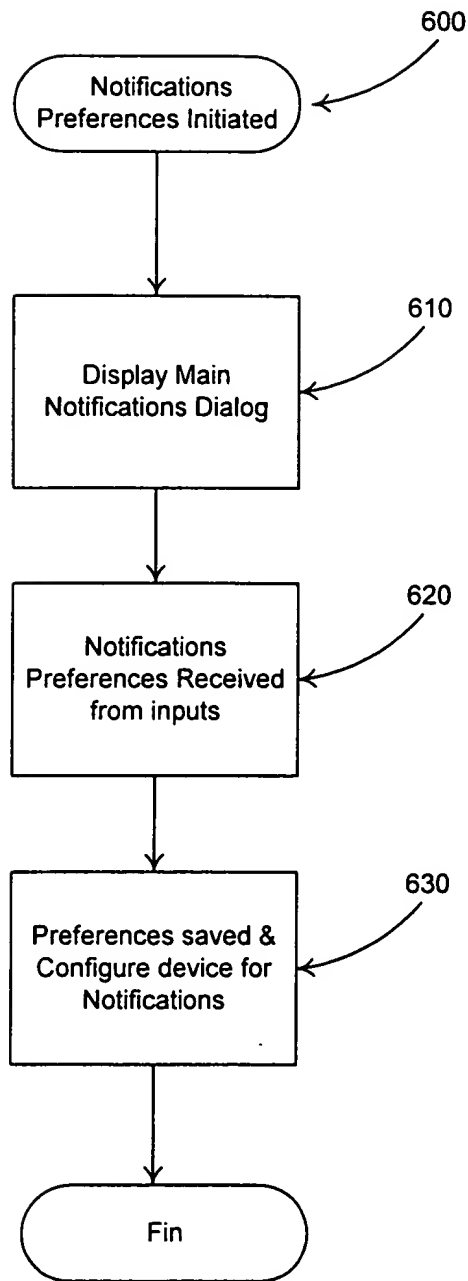


Fig. 6

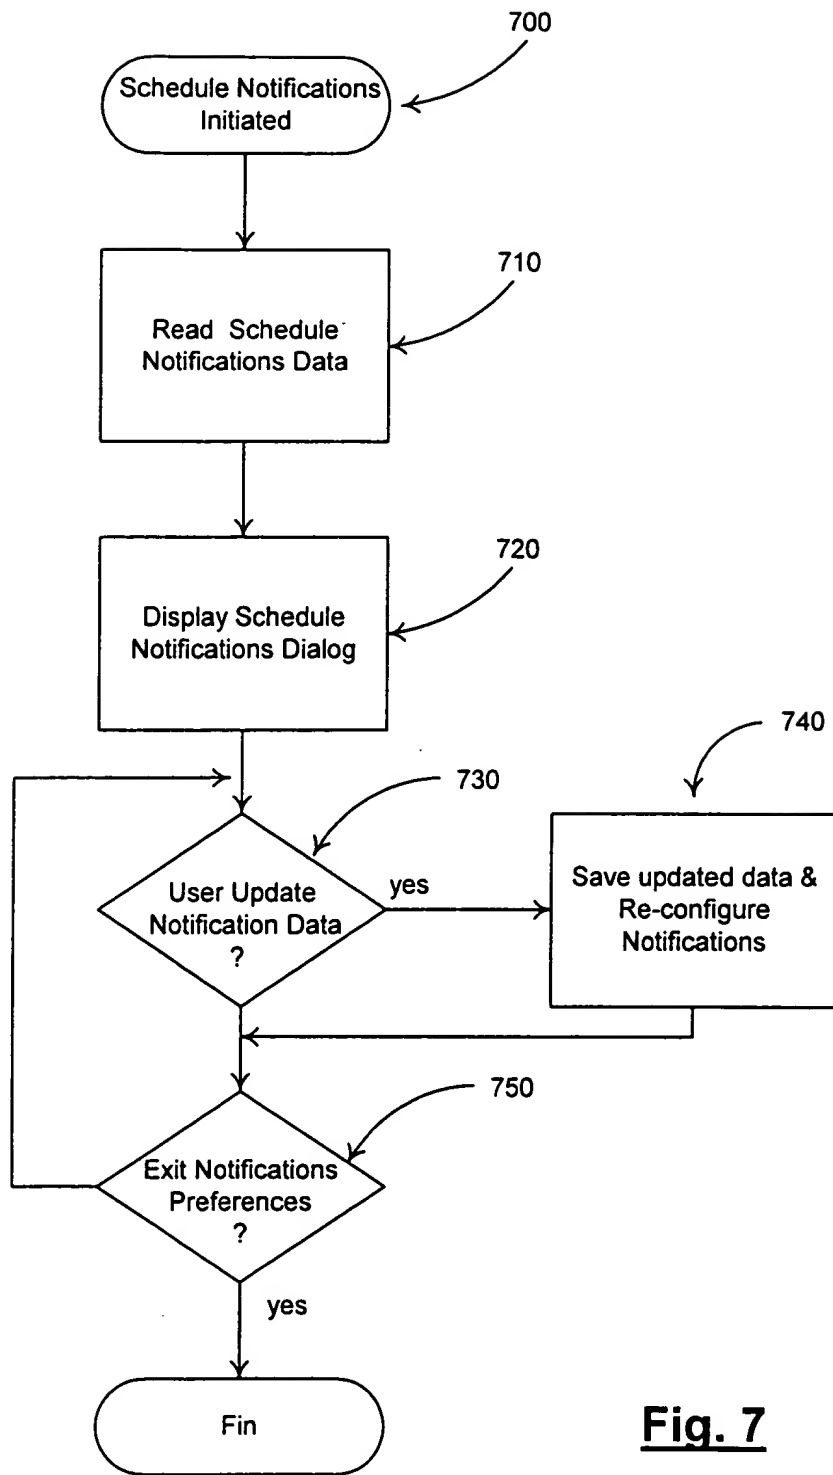


Fig. 7

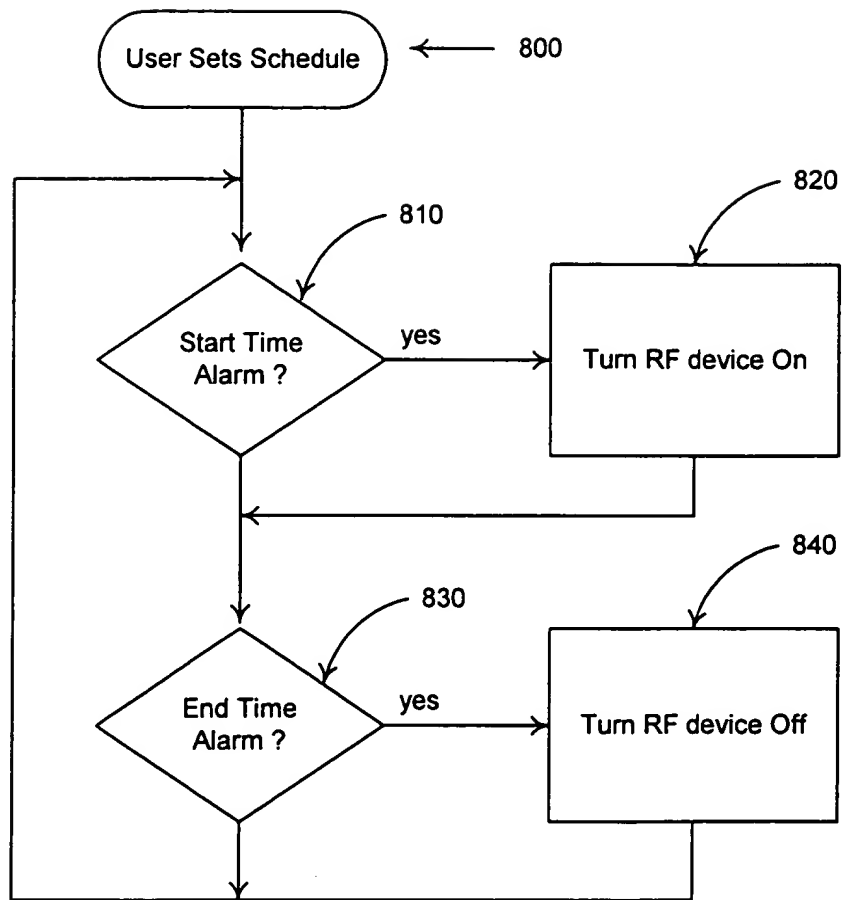


Fig. 8

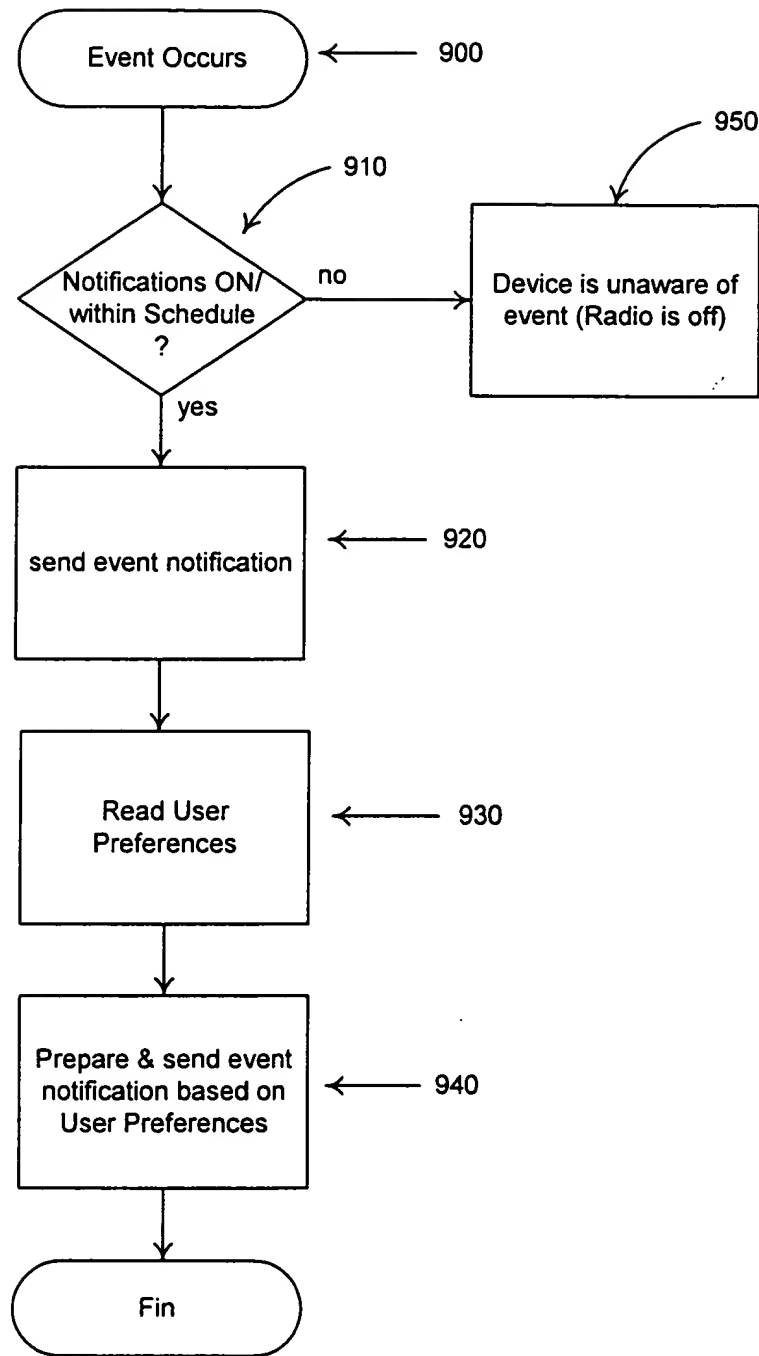


Fig. 9